


How to use the level gauge SPS septic H3

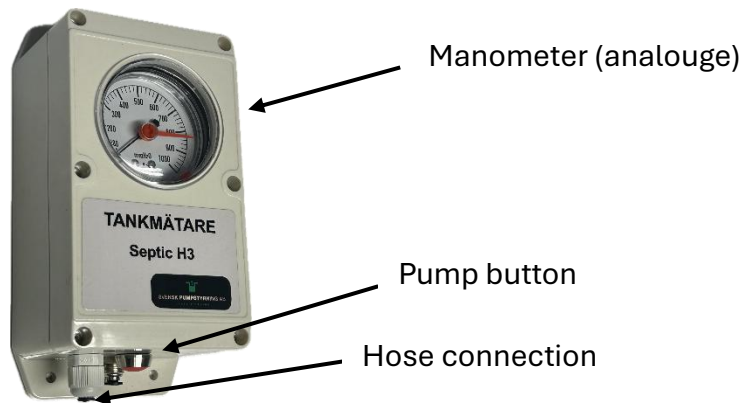

1:

Press the pump button until the pointer on the pressure gauge does not increase its range but falls back and stops. (Best with several short pump presses)

2:

Where the pressure gauge pointer has stopped, the scale shows the sludge level in the tank.

3:

When measured again later, the value has dropped or gone down to zero.

The tank should be reported for emptying when the pointer is in the orange area.

How it works

The level meter operates in a simple and reliable way. Air is pumped to the bottom of the tank, creating a counterpressure that corresponds to the liquid or sludge level. This pressure is measured in millimeters of water column, so a tank level of 500 mm (0.5 m) will be displayed as 500 mm on the meter.

Each measurement includes an automatic air pulse that keeps the tube clean, preventing clogging.

⚠ Note: The meter's manometer is sensitive to pressure beyond its scale. Avoid blocking the tube outlet while operating the pump, as this may damage the instrument.