


How to use the level gauge SPS septic H5

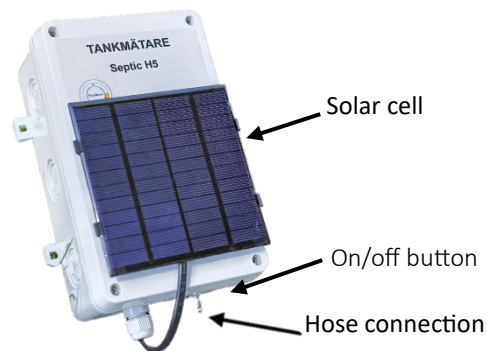

Starting up: Start the level gauge by pressing the ON/OFF button. The meter should then perform a measurement within approximately 30 seconds. Check if the measurement has been registered on your Septikcon page.

For GSM level gauge: Everything is prepared, SIM card included.

MANUAL MEASUREMENT:

Use the push button to perform a manual measurement (a restart will occur).

Check whether the measurement has been received on the tank page.

AUTOMATIC MEASUREMENT:

The meter is programmed to take a measurement once per day (this can be changed via your tank page on the web).

Measurement values are recorded on the website www.septikcon.se, where after logging in you can view your septic tank, including history, emptying dates, sludge level, alarm level, etc.

BATTERY OPERATION:

The level gauge is equipped with rechargeable batteries that are charged via the solar panel.

How it works

The level meter operates in a simple and reliable way. Air is pumped to the bottom of the tank, creating a counterpressure that corresponds to the liquid or sludge level. This pressure is measured in millimeters of water column, so a tank level of 500 mm (0.5 m) will be displayed as 500 mm on the meter.

Each measurement includes an automatic air pulse that keeps the tube clean, preventing clogging.

⚠ Note: If there is a risk of freezing in the tank, the meter must be manually switched off by disconnecting the battery connector.